



CarouselUSA

TeleRadio Panther Series R17-01

Remote Control Pairing Instructions

⚠ DANGER — ELECTRICAL HAZARD ⚠

OPENING THE CONTROL PANEL EXPOSES LIVE WIRING. ANY WORK PERFORMED INSIDE THE CONTROL BOX IS DONE AT THE USER'S OWN RISK. TO PREVENT ELECTRICAL SHOCK, USE CAUTION WHENEVER WORKING NEAR EXPOSED WIRING OR CONNECTIONS.

- Contact with live parts can cause serious injury or death. Only touch the parts shown in this guide.
- Keep children, pets, and bystanders away from the open control panel and the turntable.
- Make sure no person, vehicle, or object is on or near the turntable while testing.
- Do not work in wet conditions or with wet hands.
- If you are unsure about any step, stop and contact CarouselUSA or a licensed electrician.

I. Remote Pairing *You'll need: a Phillips screwdriver*

Step 1: Make sure the **ON/OFF switch** on the back of the remote is set to **ON**.



Step 2: Remove the four Phillips screws and lift the cover off the radio receiver (the yellow box).




Receiver cover



Cover removed

Step 3: Press and release the receiver **Function (F)** button. **LED 5** lights **red**.

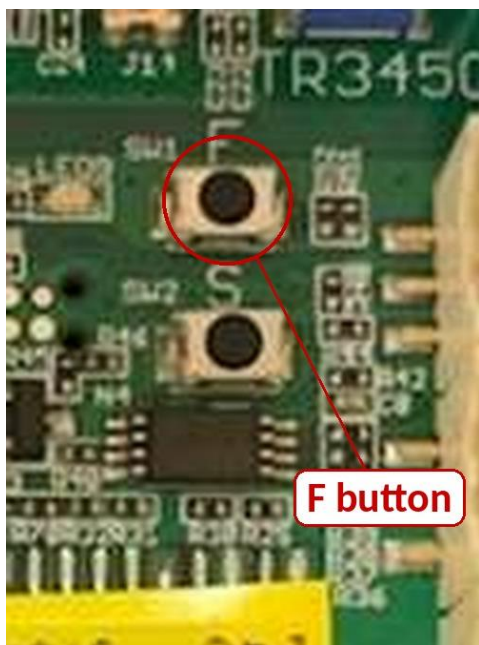


Press F




LED 5 lit red

Step 4: Press and release the receiver **Select (S)** button. **All status LEDs** will light up.

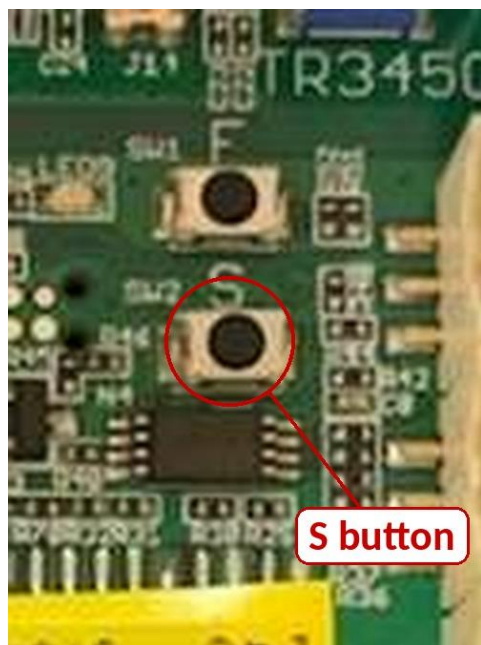

Press S

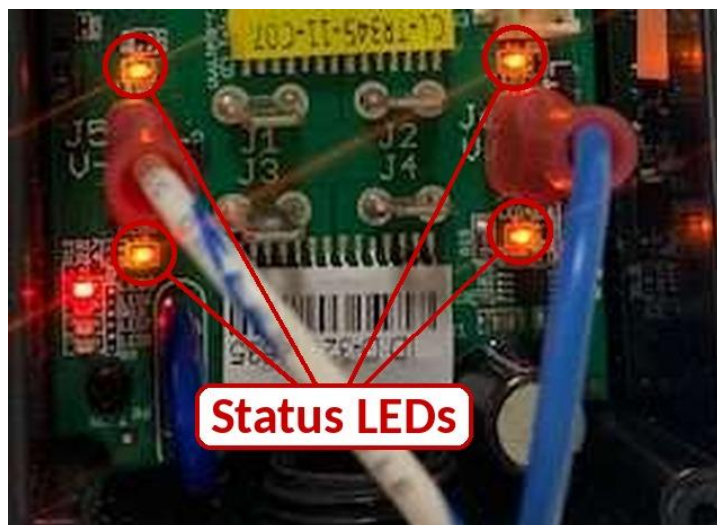

All status LEDs lit

Step 5: On the remote, press and hold **Buttons 1 and 2 at the same time**. All function and status LEDs on the receiver light up, then **flash 2 times**.



Press and hold Buttons 1 and 2 together

Step 6: Release the remote buttons. All function and status LEDs **flash 1 time**. The remote is now paired to the receiver.

II. Erasing All Remotes from the Receiver

⚠ This erases EVERY remote paired to the receiver

Only do this if you mean to remove all remotes. Afterward, every remote you want to use must be paired again using Steps 3 through 6.

Step A: Press the **Function (F)** button on the receiver. The function LED lights **red**.

Step B: Press and **hold** the **Select (S)** button on the receiver. All relay LEDs light **red**.

Step C: Keep holding until all relay LEDs **go out**.

Step D: Release the Select (S) button. All remotes are now erased from the receiver.

If the red function LED flashes, one or more remotes are still registered in the receiver.