



CarouselUSA

TeleRadio T20RX-02AKL — Remote Control Pairing Instructions

⚠ DANGER — ELECTRICAL HAZARD ⚠

OPENING THE CONTROL PANEL EXPOSES LIVE WIRING. ANY WORK PERFORMED INSIDE THE CONTROL BOX IS DONE AT THE USER'S OWN RISK. TO PREVENT ELECTRICAL SHOCK, USE CAUTION WHENEVER WORKING NEAR EXPOSED WIRING OR CONNECTIONS.

- Contact with live parts can cause serious injury or death. Only touch the parts shown in this guide.
- Keep children, pets, and bystanders away from the open control panel and the turntable.
- Make sure no person, vehicle, or object is on or near the turntable while testing. Do not work in wet conditions.
- If you are unsure about any step, stop and contact CarouselUSA or a licensed electrician.

I. Getting Started *You'll need: a flat-head screwdriver and a Phillips screwdriver*

Step 1: Turn off Main Power.



Step 2: Open the control panel using a flat screwdriver.




Step 3: Manually turn the power supply ON inside the control panel.


⚠ Panel is now live.



Step 4: Unscrew the four Phillips screws and remove the receiver cover. (The receiver is the grey rectangular box inside the control panel.)

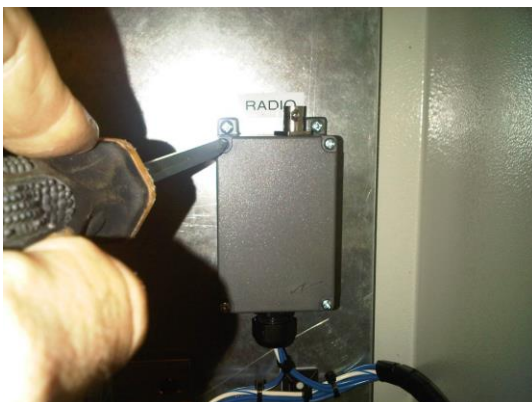

Step 5: Locate the receiver programming button.

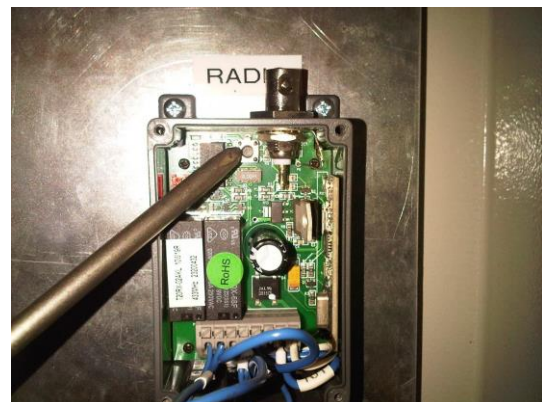

II. Programming — TeleRadio TX20

NOTE: Check the Remote Batteries First

More often than not, non-functioning remotes are a result of **weak** or **dead batteries**. A remote with healthy batteries has an indicator light that is **bright red** and blinks rapidly. A remote with weak batteries still blinks rapidly, but the red light looks dim or faded, and it will not transmit signals properly. Replace batteries with **Sony CR2032** or equivalent.

- Step 6:** Press and hold the receiver **programming button** until the top red LED lights **solid red** (about 0.3 to 2 seconds).
⚠ Release as soon as the LED turns solid red. Holding too long (about 8 seconds) will erase all paired remotes.
- Step 7:** Press the button on the remote that you want to pair. The red LED **flashes three times**. The remote's ID code is now stored in the receiver.
- Step 8:** Repeat **Steps 6 and 7** for the second button.

III. Changing Button Mode (Momentary / Latching)

⚠ WARNING

DO NOT PROGRAM TO LATCHING MODE IF YOUR CONTROLS INCLUDE A 90° OR 180° TURN FUNCTIONALITY.

Mode	How It Works
Momentary	Requires continual pressing of the remote button for turntable operation.
Latch	One press and release begins operation. Pressing the same button again stops turntable operation.

- Step A:** On the remote, press and hold the desired button. At the same time, press the **round black button** in the receiver. Keep holding both. When the red light in the receiver starts to **FAST BLINK**, release both buttons. The button mode has been changed.
- Step B:** Test the button to make sure it is working as desired.
- Step C:** Repeat the steps above for **EACH** individual pushbutton.

Note: TeleRadio remotes allow you to program each pushbutton with a different mode. For example, one button can be set to Momentary Mode and the other to Latch Mode.

IV. Clearing All Paired Remotes

⚠ This erases EVERY remote paired to the receiver

Press and hold the receiver **programming button** for about **8 seconds**, until **all LEDs go off**. Then release the button.
*After clearing, no remotes will work until they are paired again. Repeat **Steps 6 through 8** for each remote you want to use.*